




影像随心 思锐随行

## 使用说明

### AR-3204 三脚架

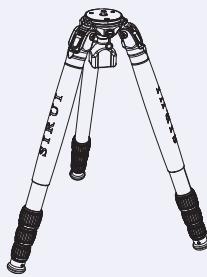

广东思锐光学股份有限公司

地址: 广东省中山市五桂山第三工业区 电话: 0760-88897373  
邮编: 528458 传真: 0760-88207062 服务热线: 400 830 2299  
邮箱: info@sirui-photo.com 网址: www.sirui.com  
投诉电话: 18165639388 (仅限工作日 8:15~12:15, 14:00~18:00)

### 三脚架参数

	最大重量 kg	25
	收起高度 mm	2.0
	不升中轴高 mm	545
	最小高度 mm	1500
	最大管径 mm	22.2
	最小管径 mm	33
AR-3204	节数	4

### 1.认识产品

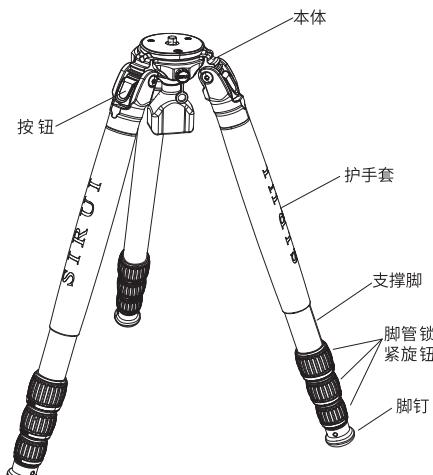


图 1

### 2.脚管的伸缩

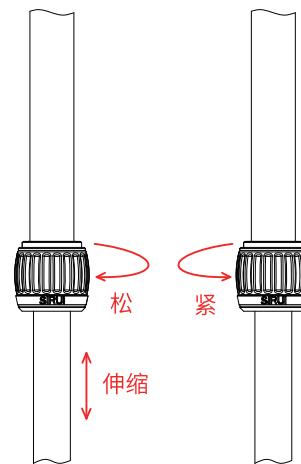


图2-1

脚管打开后分别从小到大的顺序拧紧各个锁紧旋钮

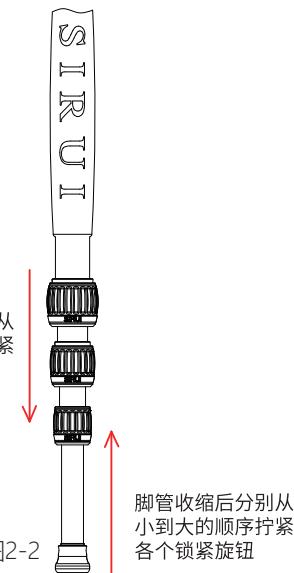


图2-2

### 3.包胶脚钉转换成钢钉模式

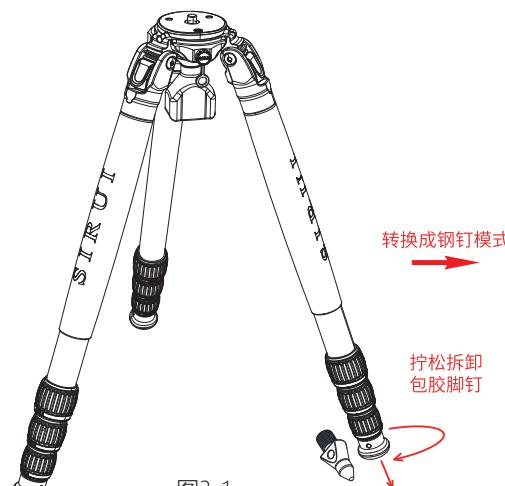


图3-1

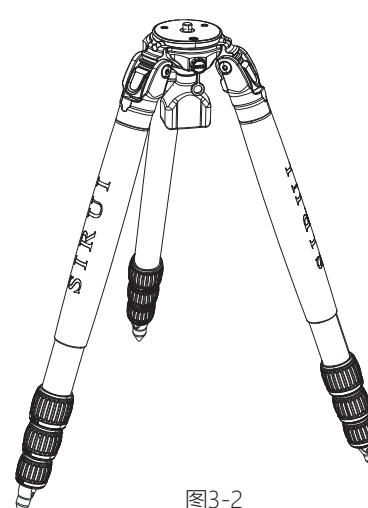


图3-2

1. 认识产品(图1如所示)；
2. 伸缩脚架管: 按图示的方向同时或分别将锁紧旋钮转动约1/2圈, 然后将脚管拉出您所需要的长度, 再按图示方向, 分别从大到小的顺序拧紧各个锁紧旋钮; 收缩时松开锁紧旋钮应按从小到大的顺序操作(如图2-1至图2-2所示);
3. 三脚架的包胶脚钉拆卸后装上钢钉可更换成钢钉模式(如图3-1至图3-2所示);



#### 温馨提醒

- 1. 在使用脚架拍摄且需要移动位置时, 请将相机从三脚架上取下, 切勿将相机装在脚架上一起移动, 剧烈的晃动(特别是安装了长焦镜头的相机)可能会使转接螺丝断裂, 进而损坏相机。
- 2. 伸展脚管时, 请从最大管径的脚管到最小管径的脚管的顺序伸展; 收缩脚管时, 请从最小管径的脚管到最大管径的脚管的顺序收纳。

#### 注意事项:


- 不要超过最大的制定重负(请参考个别产品说明);
- 当使用产品时, 时常紧锁其安全装置;
- 切勿在温度低于零下40摄氏度及高于100摄氏度使用, 当在潮湿、沙地、布满尘埃的环境下使用后, 谨记将产品弄干及清洁, 不建议在海水中使用;
- 切勿将产品长时间放在太阳下暴晒及避免高温环境, 例如长时间放在车厢内或玻璃后;
- 在公众地方使用时, 如在没有人照料下, 切勿留下设备而引致其他公众不便;
- 建议在运输过程中, 将设备(例如相机)从脚架上移除;
- 使用温和清洁剂及柔软毛巾清洁, 将尘埃及沙粒从所有锁制及活动部件清除;
- 除非有需要, 此设备无需定期添加润滑油, 如确实需要时, 请使用标准润滑油或油蜡;
- 为自身安全着想, 切勿将产品接触任何电源。

※思锐公司保留产品升级和由于产品升级而变更各种参数的权利, 请以实物为准, 恕不另行通知。  
印刷品上如有印刷错误或词语方面的错漏而造成不便, 敬请包涵。



SIRUI, Capturing your Imagination!

## Instructions AR-3204 Tripod

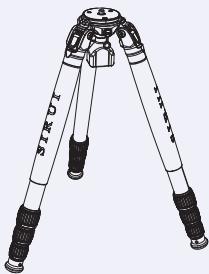

GUANGDONG SIRUI OPTICAL CO.,LTD.  
Add: The Third Industrial District, Wuguishan Town, Zhongshan City,  
Guangdong, China (Zip Code: 528458)  
Tel: 86-760-88897373 Fax: 86-760-88207062  
E-mail: info@sirui-photo.com Website: www.sirui.com

### Tripod Data Chart

	Max Load kg/lb	25/55.12
	Weight kg/lb	2.0/4.41
	Closed H mm/inch	545/21.45
	Height mm/inch	1500/59.06
	Min H mm/inch	120/4.72
	Max Dia. mm/inch	33/1.30
	Min Dia. mm/inch	22.2/0.87
Section		
AR-3204	4	

## 1. Know the Product

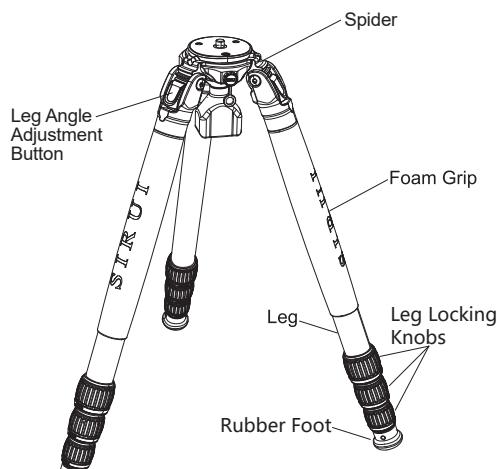


Fig. 1

## 2. Extend or Retract the Tripod Legs

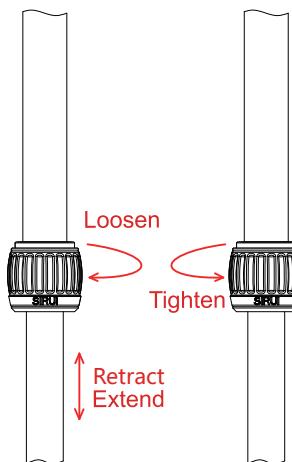


Fig. 2-1

Extend the leg sections and tighten the Leg Locking Knobs from large to small.



Fig. 2-2

Retract the leg sections and tighten the Leg Locking Knobs from small to large.

## 3. Rubber Feet & Metal Spikes

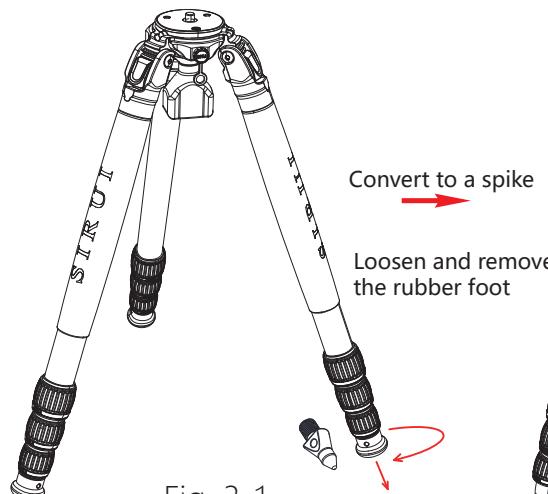


Fig. 3-1

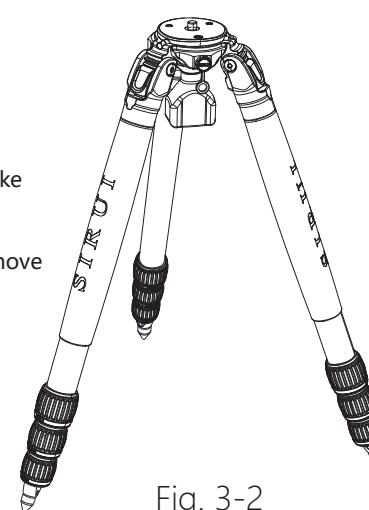


Fig. 3-2

\* Specifications of products may be changed without notice.

### 1. Know your Product (Fig.1)

### 2. Extend or Retract the Tripod Legs (Fig.2-1 and Fig.2-2)

Loosen the Leg Lock Knobs with 1/2 turn clockwise all at the same time or separately to extend the Leg Sections to the desired length, lock the Leg Sections by turning the Leg Lock Knobs counter-clockwise from large to small. Retract the Leg Sections from small to large by loosening or locking the Leg Lock Knobs.

### 3. Change the Rubber Feet to Spike (Fig.3-1 and Fig.3-2).



#### CAUTION

Please remove the camera from the tripod when changing the position of the tripod. Do not place the tripod with camera attached, over your shoulder or carry the tripod horizontally by the legs. Strong shaking may cause damage of the screw in the mounting plate and/or the camera. Please extend the legs from the biggest tube to smallest tube; close the legs from the smallest tube to biggest tube, to avoid leg joint bushing damage.

#### Attention:

Do not exceed the recommended load limit of the head and/or tripod. (Please refer to product specifications.)

Please make sure that the locks are securely tightened when in use.

This product should not be used in environments that exceed the following conditions (-40 ~ +100°C/-40 ~ +212°F). And, when used in damp, dirty or dusty environments, please clean and dry thoroughly after use, to assure proper functioning in the future. It is not recommended to expose this product to saltwater. If exposed, please clean with mild soap and warm water and towel dry.

Please keep from high temperatures and direct exposure to bright sunlight for extended periods of time. Please do not leave the equipment alone in a public place, which can be an inconvenience or hazard to others.

To protect your camera gear, please remove it from the tripod/ball head when transporting from place to place.

Please use a soft towel with warm water and mild soap to clean the locking system and gliding parts when necessary. Towel dry before storing the tripod.

Under most situations, there is no need to lubricate any parts of this product. The addition of most lubricants will gum up the mechanisms and reduce their normal gliding characteristics. Please call or email us if you have any questions or special needs.

Please keep this product away from all electrical power sources.