

SIRUI, Capturing Your Imagination!

# Instructions

# P-424FS & P-424FL Video/Photo Monopod



V1.0 2022.09.26

# GUANGDONG SIRUI OPTICAL CO., LTD.

Add: The Third Industrial District, Wuguishan Town, Zhongshan City, Guangdong, China (Zip Code: 528458) Tel: 86-760-88897373 Fax: 86-760-88207062 E-mail: info@sirui-photo.com Website: www.sirui.com

## 1. Parts Name



# 2. Retractable Legs



# 3. 360° Panning System



# 4. Friction Adjustments and All-Round 36° Tilting

4.1 Use the Ball Locking Knob to lock the ball or adjust the friction.

# 5. Tripod Base Setup

5.1 Open the base.

Attach a head or other photography equipment to the Mounting Platform. Open up the base in the direction

5.2 Fold up the base

of the arrow



Clockwise Turn: Secure Counter-clockwise Turn: Unlock



4.2 Loosen the Ball Locking Knob to tilt the monopod 36° in any direction.

## 6. Inverting the 3/8" and 1/4" Mounting Screw

# 8. Low Profile Tripod



Inverting the screw:

- 1. Press the button on the side of the platform to take out the screw.
- Invert the screw and insert it into the platform. Don't release the button until the screw hits the end.

# 7. Monopod





## Suggestion 1: Pair the monopod with the VH-90 platform or VA-5/VH-10 fluid head from SIRUI.





VH-90 Platform

VA-5/VH-10 Fluid Head

### Suggestion 2: Instructions on using the low profile tripod



### P-424FS/FL Video/Photo Monopod Specs

	/	$\bigoplus$	⊕	Ŧ	Ī	Ŧ	Ŧ	Ū	max
	Section	Max Dia mm/inch	Min Dia mm/inch	Max H mm/inch	Min H mm/inch	Max H mm/inch (without base)	Min H mm/inch (without base)	Weight kg/lb	Load kg/lb
P-424FS	4	36/1.42	25/0.98	1600/63.00	650/25.60	1490/58.66	540/21.26	1.2/2.65	12/26.45
P-424FL	4	36/1.42	25/0.98	1900/74.80	730/28.74	1790/70.74	610/24.01	1.25/2.75	12/26.45

#### Caution!

To protect your photo/video equipment, please hold the equipment with your hands or step on the tripod base while shooting.

#### Notice:

- 1. Please make sure the buckles are locked securely and hold the monopod with your hands when adjusting the Upper Twist Collar and the Ball Locking Knob.
- 2. Place the monopod on a flat surface to detach it.
- 3. Please use the tripod base (rubber feet attached) on a flat surface.
- 4. Hold the camera with your hands before pulling down the Top/Bottom Quick Release Sleeve.



#### CAUTION!

Do not move the extended monopod with a camera mounted around. Extend the leg tubes from large to small and retract the leg tubes from small to large.

#### Attention ·

Do not exceed the recommended maximum load weight (please refer to the manual).

Please make sure that the locks are securely tightened when in use.For A added safety, please put your wrist through the wrist strap when using the monopod.

This product should not be used in environments that exceed the following conditions (-40 ~ +100°C/-40 ~ +212°F). And, when used in damp, dirty or dusty environments, please clean and dry thoroughly after

\_ use, to assure proper functioning in the future. It is not recommended to expose this product to saltwater. If exposed, please clean with mild soap and warm water and towel dry.

- Please keep from high temperatures and direct exposure to bright ⋇ sunlight for extended periods of time.
- Please do not leave the equipment alone in a public place, which can be Х an inconvenience or hazard to others.
- To protect your camera gear, please remove it from the tripod/ball head л when transporting from place to place.
- Please use a soft towel with warm water and mild soap to clean the locking system and gliding parts when necessary. Towel dry before storing the monopod.

Under most situations, there is no need to lubricate any parts of this product. The addition of most lubricants will gum up the mechanisms and reduce their normal gliding characteristics. Please call or email us if you have any questions or special needs.

Please keep this product away from all electrical power sources.